KALORIK

Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

KALORIK

KALORIK

Popcorn Maker

Palomitero

KALORIK

www.KALORIK.com

USK PCM 35546

120V~60Hz 850W (7.1A)

↑

Front cover page (first page)

KALORIK
Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

EN OPERATING INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS BEFORE USE**
2. Check that your mains voltage corresponds to that stated on the rating plate of the appliance before using the appliance.
3. Do not leave unattended while in use. Always unplug the product from the electrical outlet when not in use.
4. Never plug in or operate the unit when empty, or when not fully assembled.
5. DO NOT TOUCH Hot surfaces. This product will become hot when in use. Use protective hand covering (oven mitts) to avoid burns or serious personal injury.
6. To protect against electrical shock do not immerse cord, plug, or the motor unit in water or other liquid.
7. Close supervision is necessary when the appliance is used by or near children.
8. This product is not a toy! Please keep out of reach of children and pets. This product is not intended for use by children, by persons with reduced physical, sensory or mental capabilities, or lacking experience or knowledge, unless they have been given supervision or instruction concerning the use of the product, by a person responsible for their safety. Extra caution is always necessary when using this product.
9. The cover must be in place before plugging the product into an electric outlet.
10. Never put more than 1 measuring cap (60g) of kernel into the popping chamber, else kennels will not pop and the machine could be damaged.
11. Do not move the product when in operation or heated.
12. Unplug from outlet when not in use and allow to cool before putting on or taking off parts, relocating, servicing or before cleaning.

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

13. Occasionally, un-popped kernels may be thrown out from the chute. Do not pick up the hot kernels immediately! To avoid contact with the hot kernels, never put your face, hands, or other body parts near the product while in operation. Keep at least 3 feet (1 meter) away from the product when corn is popping.
14. Do not put on a glass surface. And always place the product on a flat, level, stable surface, especially during operation.
15. This product pops with hot air ONLY. Do not put sugar, salt, butter, margarine or any other additive in the popping chamber. Any other substance than corn would damage the appliance and may result in injury.
16. Turn product off before unplugging from the wall outlet.
17. To avoid possibility of a burn hazard, never allow the product to touch, or operate near flammable items, such as paper, curtains, blankets, towels, …
18. Do not operate in confined areas. Always operate the appliance in well ventilated areas. Keep at least 4-6 inches of space on all sides to allow adequate air circulation.
19. To disconnect, set the product switch to off, and then unplug the plug from the wall outlet. Pull directly on the plug; do not pull on the power cord.
20. Do not unplug with wet hands
21. DO NOT operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
22. The use of accessory attachments not recommended by the appliance manufacturer may cause fire, electric shock or serious personal injuries.
23. DO NOT use outdoors or in damp area, near water or other liquids.
24. DO NOT let cord hang over edge of table or counter or touch hot surfaces.
25. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
26. DO NOT use appliance for other than intended use
27. DO NOT immerse main body part in water.

KALORIK
Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

SAVE THESE INSTRUCTIONS

HOUSEHOLD USE ONLY

Caution:

- This product is used to pop kernel corn into popcorn. Do not use for other purposes.
- Do not use with pre-packaged salt/oil/popcorn combinations.
- This product will not turn off automatically. To avoid overheating, always add the kernels before turning the product ON. Turn OFF after use.
- Place a heat resistant non-plastic coaster or mat on a stable surface between the product and your countertop/table. Failure to do so may cause finish to darken, permanent blemishes to occur, or stains to appear.
- To avoid a circuit overload, do not operate another high wattage product on the same electrical circuit.
- Always remove the un-popped kernels and residues from the popping chamber before starting another batch.

POLARIZED PLUG INSTRUCTIONS

This appliances is equipped with a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit into the polarized outlet only one way. If the plug does not properly fit into the outlet at first, reverse it. If it still does not fit, contact a competent qualified electrician. **Do not attempt to modify the plug in any way**.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from becoming entangled in, or tripping over a longer cord.
Extension cords may be used if care is exercised in their use.

- The electrical rating of the extension cord should be at least that of the appliance. If the electrical rating of the extension cord is too low, it could overheat and burn.
- The resulting extended cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

IMPORTANT PRECAUTIONS TO REMEMBER

- NEVER immerse in water
- NEVER use near water
- NEVER use an abrasive sponge or cloth
- NEVER use a scouring pad on the unit
- NEVER leave unit unattended while in use
- This unit uses hot air. Do not use butter or oil or water in the popping chamber
- DO NOT touch hot surfaces. Unit becomes hot when corn is popping
- DO NOT put in dishwasher
- Keep out of reach of children
- NEVER put your face near the unit while corn is popping. Stay at least 3 feet (1 meter) away from unit while corn is popping
- NEVER put you hands in the unit while corn is popping. Wait at least 5 minutes after the unit has been turned off.

IMPORTANT INFORMATION

This appliance is not for professional use. You should follow the requested breaks. Failure to follow this instruction carefully may result in damage to the motor. The breaks should last at least 10-15 minutes after 2 consecutive operations/ popcorn batches.

Do not operate for more than 5 minutes consecutively per batch. Overheating will affect performance and damage the product.

KALORIK
Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

PART DESCRIPTION

1. Measuring cap / Butter dish
2. Lid /cover
3. Popping chamber
4. ON/OFF switch
5. Base
6. Chute

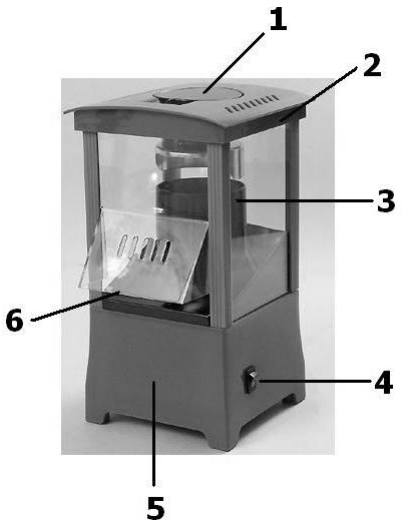

BEFORE FIRST USE

- Before first use, lift the lid off and wipe clean the inside of the unit with a non-abrasive moist sponge or towel, then wipe dry
- Put the lid back on the base.

OPERATING INSTRUCTIONS

- Never add butter, oil or sugar to the corn in the popping chamber. Only use corn especially made for popping.
- Make sure the appliance is unplugged and switched off, and fully assembled.
- Measure popping corn using the corn measuring cap. One full measure per popping session is enough (approx. 60g). More than one full measure could overfill the appliance and disturb the correct functioning of the appliance. Less than one full measure could cause fewer kernels to pop and more un-popped kernels to be ejected from the chute.
- Pour corn into the popping chamber through the filling inlet of the lid.
- Put the measuring cap back on top of the lid.
- Select a bowl with at least 3L / 20 cup capacity, that is heat resistant and will fit under the chute (but not blocking it)

- Place a large bowl under the chute so that the edge of the bowl is touching the body of the machine. It is important that the popcorn being ejected down the chute into the bowl is not re-directed, blocked or otherwise interfered with, since the popcorn is hot and premature contact may cause burns.
- Plug into the outlet and switch on the appliance. After a few moments the continuous popping action will automatically feed corn into the bowl until all has been popped. This process will last about 3 to 5 minutes.
- Turn off the appliance when popping has stopped.
- If you want to pop a second portion, first remove the corns remaining in the popping chamber. Pay attention not to get burned when handling the popping chamber as this part as well as the measuring cup become very hot when the appliance is functioning. Therefore we advise you to wait about 15 minutes before popping a second portion.

WARNING: THIS IS NOT A TOY! PLEASE DO NOT LEAVE CHILDREN UNSUPERVISED WITH THE APPLIANCE DURING OPERATION, WHEN IT IS HOT OR CONNECTED TO ELECTRICAL OUTLET.

HINTS

- Popcorn is usually very dry. However, if desired, you can fill the measuring cup with butter or margarine place it on top of popping chute, **butter side up.** The heat generated to pop the corn will also melt the butter for adding to your popcorn in the bowl beside the popcorn maker (NEVER put the butter into the heat chamber). With butter, the sugar or salt you will add will stick to the popcorn better. Clean the measuring cup after use.

- The appliance is designed for all regular and premium brands of popcorn. Yellow popcorn generally pops larger than white kernel. (Organic kernel is not highly recommended as it will not pop as well). Please note to use fresh kernel as older dried kernel can scorch and cause smoking in the unit.

- If your kernel is old and dried out, you can freshen it by putting the kernels into an air tight container leaving some space for

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

shaking. Put in 1 teaspoon of water for each cup of kernel. Shake twice a day for 3 days leaving the container in the refrigerator. Then the kernel should be fresh again.

CLEANING AND MAINTENANCE

- Make sure the appliance has totally cooled down before cleaning (allow to cool 10 to 15 minutes after use)
- The base, power plug and cord shall never be immersed in water.
- Clean the lid and other plastic parts with a towel damped with warm water. Never use abrasive products as they could damage the appliance. Then wipe dry with a non-abrasive towel.
- The measuring cap can be cleaned in soapy water, if used for butter melting.
- Never use a scouring or steel wool pad on any parts of this appliance.
- All parts must be dried completely before reassembly (place lid on the base)
- Store in a cool, dry place.

KALORIK
Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

WARRANTY

We suggest that you complete and return the enclosed Product Registration Card promptly to facilitate verification of the date of original purchase. However, return of the Product Registration Card is not a condition of these warranties. You can also fill this warranty card online, at the following address: **www.KALORIK.com**

This KALORIK product is warranted in the U.S.A. for 1 year from the date of purchase against defects in material and workmanship. This warranty is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance.

During this period, the KALORIK product that, upon inspection by KALORIK, is proved defective, will be repaired or replaced, at Kalorik's option, without charge to the customer. If a replacement product is sent, it will carry the remaining warranty of the original product.

This warranty does not apply to any defect arising from a buyer's or user's misuse of the product, negligence, failure to follow KALORIK instructions noted in the user's manual, use on current or voltage other than that stamped on the product, wear and tear, alteration or repair not authorized by KALORIK, or use for commercial purposes. There is no warranty for glass parts, glass containers, filter basket, blades and agitators, and accessories in general. There is also no warranty for parts lost by the user.

ANY WARRANTY OF MERCHANTABILITY OR FITNESS WITH RESPECT TO THIS PRODUCT IS ALSO LIMITED TO THE ONE YEAR LIMITED WARRANTY PERIOD.

Some states do not allow limitation on how long an implied warranty lasts or do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

If the appliance should become defective within the warranty period and more than 30 days after date of purchase, do not return the appliance to the store: often, our Consumer Service Representatives can help solve the problem without having the product serviced. If servicing is needed, a Representative can confirm whether the product is under warranty and direct you to the nearest service location.

If this is the case, bring the product, or send it, postage prepaid by the user (all Kalorik customers are responsible for the initial shipment back to the warranty center), along **with proof of purchase** and indicating a **return authorization number** given by our Consumer Service Representatives, to the authorized KALORIK Service Center (please visit our website at **www.KALORIK.com** or call our Customer Service Department for the address of our authorized KALORIK Service Center).
If you send the product, please include a letter explaining the nature of the claimed defect.

If you have additional questions, please call our Consumer Service Department (please see below for complete contact information), Monday through Friday from 9:00am - 6:00pm (EST). Please note hours are subject to change.

If you would like to write, please send your letter to:

KALORIK Consumer Service Department
Team International Group of America Inc.
1400 N.W 159th Street, Suite 102
Miami Gardens, FL 33169 USA

Or call:

Toll Free: +1 888-521-TEAM / +1 888-KALORIK

Only letters can be accepted at this address above. Shipments and packages that do not have a return authorization number will be refused.

KALORIK
Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

(SP) MANUAL DE INSTRUCCIONES

CONSEJOS DE SEGURIDAD

Cuando se utilizan aparatos eléctricos, hay unas precauciones básicas de seguridad que siempre se deben seguir, tales como:

1. **LEA TODAS LAS INSTRUCCIONES.**
2. Antes de utilizar el aparato, compruebe que el voltaje de la red eléctrica coincide con el indicado en la placa de datos técnicos del aparato.
3. No deje su aparato sin vigilancia mientras esté en uso y nunca lo deje enchufado si no esta usándolo.
4. No enchufe ni opere la unidad cuando está vacía, o cuando no esté completamente ensamblada.
5. No toque las superficies calientes. Este producto se calienta cuando durante el uso. Proteja sus manos (guantes de cocina) para evitar quemaduras o lesiones graves.
6. Para protegerse contra una descarga eléctrica, no sumerja el aparato o el enchufe en agua o en otros líquidos.
7. Es siempre necesaria la supervisión cercana cuando este aparato sea utilizado cerca de niños. Este aparato no debe ser usado por niños.
8. Este producto no es un juguete! Por favor, manténgalo fuera del alcance de los niños y mascotas. Este producto no está destinado a ser utilizado por niños, personas con discapacidades físicas, sensoriales o mentales, o que carecen de experiencia o conocimiento, a menos que no sean supervisados o instruidos acerca del uso del producto, por una persona responsable de su seguridad. Cuando se utiliza este producto siempre es necesaria una precaución extrema.
9. La cubierta debe estar en su lugar antes de enchufar el producto a la toma eléctrica.
10. Nunca ponga más de un tapón dosificador (60 g) de grano en la cámara, si coloca mas los granos no se abrirán y la máquina podría dañarse.
11. No mueva el producto cuando esté en funcionamiento o caliente.

12. Desconecte el aparato de la toma de corriente cuando la unidad no se encuentre en uso y déjela enfriar, antes de montar o desmontar accesorios, o de limpiarlo.
13. De vez en cuando, puede que granos sin estallar sean expulsados. No recoja los granos calientes inmediatamente! Evite el contacto con los núcleos de calor, nunca ponga cara, manos u otras partes del cuerpo cerca del producto mientras esté en funcionamiento. Mantenga por lo menos 3 pies (1 metro) de distancia del producto cuando las palomitas vayan apareciendo.
14. No coloque el aparato sobre una superficie de vidrio. Y colóquelo siempre en una superficie plana, nivelada y estable, sobre todo durante su funcionamiento.
15. Este producto funciona solo con el aire caliente. No ponga azúcar, sal, mantequilla, margarina o cualquier otro aditivo en la cámara con los granos de maíz. Cualquier otra sustancia fuera del maíz podría dañar el aparato y producir lesiones.
16. Apague el aparato antes de desenchufarlo.
17. Para evitar cualquier riesgo de quemaduras, compruebe que el aparto no toca ni opera, cerca de objetos inflamables, tales como papel, cortinas, mantas, toallas, ...
18. No utilizar en áreas cerradas. Utilice siempre su aparato en lugares bien ventilados. Mantenga por lo menos 6.4 pulgadas de espacio en todos los lados para permitir la circulación de aire adecuada.
19. Para desconectar, coloque el interruptor en apagado, y luego desenchufe tirando del enchufe, nunca del cable.
20. No desenchufe con las manos mojadas
21. No opere este y ningún aparato si el cable o el enchufe están quemados o dañados, o después de que el aparato ha funcionado inadecuadamente, se ha caído o ha sido dañado en cualquier manera. El aparato debe ser reemplazado por el fabricante o por un centro de servicio autorizado o por una persona similar calificada.
22. El uso de accesorios, incluso los del vaso, que no sean los recomendados por el fabricante pueden causar incendios, descargas eléctricas o lesiones.
23. No use en exteriores, en zonas húmedas, cerca del agua u otros líquidos.

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

24. No permita que el cable cuelgue de la orilla de la mesa o del mostrador o toque las partes calientes.
25. No coloque este aparato cerca de quemadores de estufas de gas o eléctricas, o dentro de un horno caliente.
26. No use este aparato más que para lo que ha sido diseñado.
27. NO lo sumerja en agua.

GUARDE ESTAS INSTRUCCIONES
SOLAMENTE PARA USO DOMESTICO

Atención:

- Este producto es diseñado para hacer estallar el grano de maíz en palomitas de maíz. No utilice para otros fines.
- No utilizar con pre-empaquetado de sal / aceite / palomitas de maíz combinaciones.
- Este producto no se apaga automáticamente. Para evitar el sobrecalentamiento, siempre agregue los granos antes de encender el producto. Apague después de su uso.
- Coloque entre el aparato y su mostrador o mesa estable, una base de apoyo resistente al calor, que no sea de plástico. El no hacerlo puede terminar por oscurecer la superficie, o crear manchas permanentes.
- Para evitar sobrecargas, no opere otro producto de alto voltaje en el mismo circuito eléctrico.
- Antes de iniciar otra tanda de palomitas, quite siempre los granos y residuos que queden en la cámara del aparato.

INFORMACIÓN SOBRE EL ENCHUFE POLARIZADO

Este aparato esta equipado con un enchufe polarizado (una pata es más ancha que la otra). Para reducir el riesgo de choque eléctrico, este enchufe calza en el tomacorriente polarizado de una sola manera. Si el enchufe no cabe totalmente en el tomacorriente, gire el enchufe. Si aún así no calza, consulte a un servicio técnico cualificado. **No intente anular esta característica de seguridad.**

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

INSTRUCCIONES DEL CABLE

El cable de alimentación del aparato es un cable corto a fin de disminuir el riesgo de accidentes (caídas al tropezar con él, etc.) Puede utilizar un alargador si es necesario.

- Asegúrese de que el nivel eléctrico del cable es igual o mayor que el indicado. Una extensión con un bajo nivel eléctrico correría el riesgo de sobrecalentarse y de estropearse.
- Para evitar riesgos colocar de forma tal que los niños no puedan jalarlo o tropezar con él. Que no arrastre nunca por el suelo.

PRECAUCIONES IMPORTANTES A RECORDAR

- NUNCA sumerja el aparato en el agua
- NUNCA lo use cerca del agua
- NUNCA use un paño o esponja abrasiva
- NUNCA use un desengrasante para limpiar el aparato.
- Nunca deje el aparato sin vigilancia mientras esté en uso.
- Este aparato utiliza aire caliente para la preparación de las palomitas. **No use** mantequilla, aceite o agua.
- NO toque las superficies calientes. El aparato se calienta cuando el maíz está apareciendo.
- No lo ponga en el lavavajillas
- Manténgalo fuera del alcance de los niños
- Nunca coloque la cara cerca de la unidad, mientras que el maíz está apareciendo. Manténgase como mínimum a 36 pulgadas (1 metro) de distancia de la unidad.
- Nunca ponga las manos que en el aparato mientras el maíz este apareciendo. Espere al menos 5 minutos después de que el aparato ha sido apagado.

TIEMPO DE UTILIZACIÓN

Para una utilización óptima de su aparato y evitar el deterioro de su motor. HAGA una pausa de utilización: 10-15 minutos tras 2 operaciones consecutivas.

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

PARTES

1. Dosificador / calienta mantequilla
2. Tapa
3. Cámara
4. interruptor encendido/apagado
5. Base
6. Salida

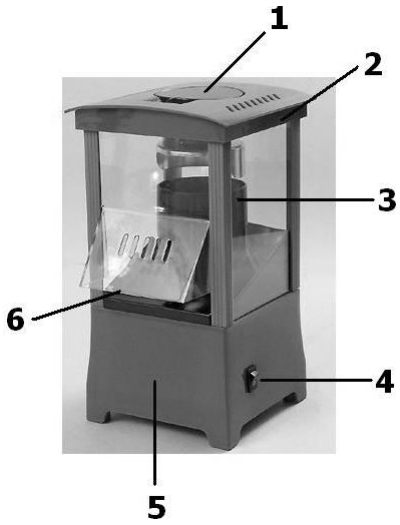

ANTES DEL PRIMER USO

- Antes del primer uso, levante la tapa y limpie el interior de la unidad con una esponja no abrasiva o un paño humedecido y luego seque bien el interior
- Ponga la tapa de nuevo.

PREPARACIÓN DE LAS PALOMITAS

- Nunca agregue mantequilla, aceite o azúcar para el maíz en la cámara. Sólo use maíz preparado para palomitas.
- Asegúrese de que el aparato está apagado y desenchufado, y completamente ensamblado.
- Utilice el dosificador situado en la tapa para la medida de maíz a utilizar. Una medida llena por uso es suficiente (aprox. 60g). Más de la medida podría atascar el aparato y alterar el funcionamiento del mismo. Menos de una medida completa podría causar una mayor expulsión de granos no estallados
- Vierta el maíz en la cámara vía el orificio de llenado de la tapa. No ponga ningún ingrediente adicional.
- Coloque de nuevo el dosificador en su sitio.

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

- Coloque bajo la salida de las palomitas un cuenco resistente al calor. Le aconsejamos que elija uno lo suficientemente alto como para impedir la propagación palomitas de maíz sobre la mesa.
- Enchufe el aparato y pulse el interruptor. La preparación de palomitas de maíz tarda unos 3 a 5 minutos.
- Cuando paren de salir palomitas de maíz, apague el aparato y desconéctelo.
- Si desea una segunda porción de palomitas de maíz, en primer lugar elimine las semillas que permanezcan en la cámara. Tenga cuidado de no quemarse durante la manipulación ya que tanto la entrada como la cámara, tapa y tapón se calientan mucho durante el uso. Le aconsejamos esperar 15 minutos antes de la realización de esta operación y preparar palomitas de maíz de nuevo.

ADVERTENCIA: ¡ESTE APARATO NO ES UN JUGUETE! POR FAVOR, NO DEJE A LOS NIÑOS CON EL APARATO SIN SUPERVISION DURANTE EL FUNCIONAMIENTO, CUANDO ESTA CALIENTE O CONECTADO A LA ELECTRICIDAD.

CONSEJOS

- La palomitas de maíz tienen la distinción de ser muy secas y, por tanto, muy difícil de endulzar. Sin embargo, si lo desea, antes de poner en funcionamiento su aparato y llene el dosificador con mantequilla o margarina, de forma que con el calor generado se derrita y una vez salidas las palomitas pueda echarlo encima de esta en el cuenco para que el azúcar o sal se adhiera mejor. (**NUNCA** ponga la mantequilla en la cámara de calor). Limpie el dosificador después de su uso.
- Esta unidad está diseñada para utilizar todo tipo y marcas de palomitas de maíz. Los granos de maíz amarillo produce palomitas más grandes que los granos blancos. No le recomendamos el grano de maíz orgánico ya que produce resultados menos satisfactorios. Tome nota que el uso de maíz fresco como los granos viejos muy secos pueden quemarse y ser causa de humo en la unidad.

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

- Si el grano es viejo y seco, se puede refrescarlo poniéndolo en un recipiente hermético dejando algo de espacio para la agitación. Añada al recipiente una cucharadita de agua por cada taza de grano Agite dos veces al día durante 3 días dejando el recipiente en el refrigerador. Tras ello el grano estará fresco nuevamente.

LIMPIEZA

- Tras el empleo y antes de su limpieza, desenchufe el aparato y déjelo enfriar (déjelo enfriar de 10 a 15 minutos tras el uso)
- La base, el enchufe y le cable no debe nunca sumergirse en agua u otro líquido.
- Para limpiar la tapa y las partes de plástico, utilice un paño humedecido en agua caliente y séquelas con una toalla no abrasiva.
- El dosificador puede lavarse en agua jabonosa si se ha usado para derretir la mantequilla.
- Nunca limpie ni el interior ni el exterior con productos abrasivos ya que estos estropean el esmalte.
- Todas las partes deben secarse por completo antes de volver a montarlas (tapa sobre la base)
- Guarde en un lugar fresco y seco.

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

GARANTÍA

Le sugerimos rellenen y nos envíen rápidamente la Tarjeta de Registro de Producto adjunta para facilitar la verificación de la fecha de compra. Por lo tanto, la devolución de esa Tarjeta de Registro de Producto no es una condición imprescindible para la aplicación de esa garantía. Puede también rellenar dicha tarjeta de garantía en línea en la dirección siguiente: **www.KALORIK.com**

A partir de la fecha de compra, este producto KALORIK está garantizado un año contra los defectos materiales y de fabricación, en los Estados Unidos. Esta garantía no es transferible. Conserve la prueba de compra original. Se exige una prueba de compra para obtener la aplicación de la garantía.

Durante este período, si el producto KALORIK después de una inspección por parte de KALORIK, se manifiesta defectuoso, será reparado o reemplazado, según lo que decida KALORIK, sin gastos para el consumidor. Si se envía un producto de reemplazo, se aplicará la garantía que queda del producto original.

Esta garantía no se aplica a los defectos causados por una mala utilización por parte del comprador o del usuario, o una negligencia al no respeto del manual de instrucciones KALORIK, o una utilización en un circuito eléctrico cuyo voltaje es diferente al que figura en el producto, o un desgaste normal, o modificaciones o reparaciones no autorizadas por KALORIK, o por un uso con fines comerciales. No existe garantía por las partes de cristal, jarras de cristal, filtros, cestos, cuchillas y accesorios en general. No existe tampoco garantía por las piezas perdidas por el usuario.

Toda garantía de valor comercial o de adaptabilidad a este producto está limitada a un año también.

Algunos estados no ponen límites a la duración de la garantía tácita o no autorizan la exclusión de daños y perjuicios accesorios o indirectos, por lo que puede que las restricciones anteriormente mencionadas no le sean aplicables a Usted. Esta garantía le otorga derechos legales particulares, pero usted puede tener también otros

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

derechos que varían de un estado a otro y algunos derechos pueden variar de un estado a otro.

Si el aparato tuviera un defecto durante el periodo de garantía y / o más de 30 días después de que se compró, no devuelva el aparato en la tienda donde le compró: a menudo, nuestro Servicio al Consumidor puede ayudar a resolver el problema sin que el producto tenga que ser reparado. Si hace falta una reparación, uno de nuestros representantes puede confirmar si el producto está bajo garantía y dirigirle al servicio post-venta más próximo.

Si fuera el caso, traiga el producto (o envíelo, correctamente franqueado) con la **prueba de compra** que mencione **el número de autorización de devolución** indicado por nuestro Servicio al Consumidor, al servicio post-venta KALORIK más próximo. (Visite nuestra web **www.KALORIK.com** o llame al Servicio al Consumidor para obtener la dirección del Servicio post-venta KALORIK exclusivo más próximo).
Si envía el producto, le rogamos añadan una carta explicando la naturaleza del defecto.

Si tiene preguntas adicionales, por favor llame al Servicio al Consumidor (véase abajo para los datos completos), de lunes a viernes, de las 9 a las 18 (EST). Note que las horas pueden ser modificadas.

Si quiere escribirnos, puede hacerlo a la dirección siguiente:

KALORIK Servicio al Consumidor
Team International Group of America Inc.
1400 N.W 159th Street, Suite 102
Miami Gardens, FL 33169 USA

O llame gratuitamente (U.S.A.) al +1 888-521-TEAM / +1 888-KALORIK

Las cartas se aceptan solamente en la dirección anteriormente mencionada. Los envíos y paquetes que no tengan número de autorización de devolución serán rechazados.

KALORIK

Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**